

Installation Instructions

Tools Needed

- Hose clamp pliers or needle-nose pliers
 - Phillips head screwdriver
 - 7/16" nut driver/socket or wrench
1. Remove toilet from floor (see Owner's Manual). (To avoid marring top of toilet, use a pad.) Turn upside down. (Do not remove mechanism.)
 2. **Post-1985** (Fig. A – spring attached to post): See Step 4.
 3. Remove lock nut from stem of ball valve.
 4. Remove phillips screws from ball valve. Gently move ball valve down to clear stem from hole in lever plate (allows easier access to hose clamp).
 5. Remove hose clamp from ball valve. Remove ball valve from flush tube. Discard old ball valve and stem.
 6. Reattach hose to new water valve. Legs on clamp should face front of toilet. Make sure clamp is past barb on valve. (DO NOT replace hose clamp with other non-spring-type clamps. Leaks may result.)
 7. Position stem into center hole in lever plate and through slotted hole in drive arm.
 8. Attach water valve to lever plate with phillips head screws (supplied).
 9. Replace 7/16" hexnut and 1/4" lock washer on valve stem.
 10. Check mechanism for valve and spring function.
 11. Install new closet flange seal on bottom of toilet. Reinstall to floor (see Owner's Manual).

THETFORD

Parts/Pièces/Particulos

Part No.
No de pièce
particulo No.**09868***RV Toilets/cabinets permanents/inodoros fijos***Aqua-Magic® Galaxy/Starlite®**

Water Valve Replacement Remplacement du robinet de prise d'eau Repuesto de la válvula

Made in U.S.A./Fabriqué aux É.-U./Hecho en EE.UU.

Thetford Corporation

Ann Arbor, MI 48106 • 1-800-521-3032 • www.thetford.com

6/05 F#33074

