

Aftermarket Installation Instructions

Aqua-Magic V

Required Tools

- Adjustable wrench or pliers for water line
- 1/2" wrench for closet bolts
- Marker or chalk

Plumbing required:

Make sure the water supply line is long enough to reach the water valve connection. Due to the higher water valve location, the Aqua Magic V may require more line. Thetford offers a kit (Thetford P/N 28962 "Water Line Extension Hose") to lengthen the toilet connection.

Procedure

1. Recommended closet flange height to be 7/16" above toilet mounting surface.
2. Attach new closet flange seal to new toilet (Fig. 1).
3. With mounting bolts in place, position toilet over closet flange (Fig. 2).
4. If floor is carpeted:
For proper function, the unit may require the installer to trace around toilet, remove toilet and cut away carpet to expose floor. Carpet beneath foot pedal may also need to be removed.
5. Using body weight, press toilet to floor.
6. Tighten nuts until toilet is stable (1-2 turns past finger tight). Check to see that flush blade re-closes after flush action.


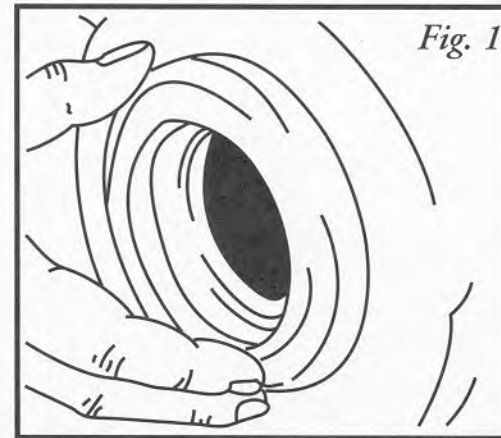


Fig. 2 - Bolt Pattern

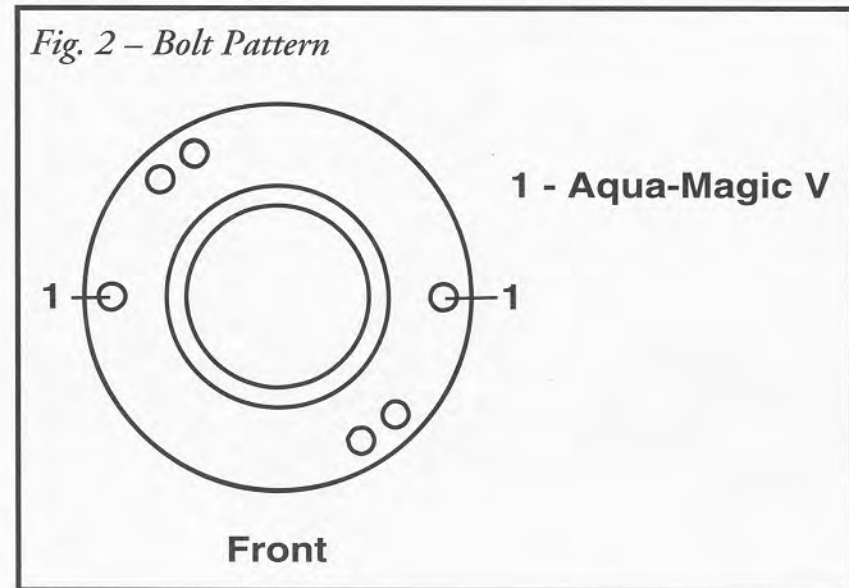

7. Connect water line to water valve using 1/2" NPT tube fitting.
8. Turn on water and flush. Check for leaks.